

INTRODUCTION

Thank you for choosing a De'Longhi product. Please take a few minutes to read these instructions. This will avoid all risks and damage to the appliance.

Symbols used in these instructions

Important warnings are identified by these symbols.

It is vital to respect these warnings. Failure to observe the instructions could result in electric shock, serious injury, burns, fire or damage to the appliance.



Danger!

Failure to observe the warning may result in life threatening injury by electric shock.



Important!

Failure to observe the warning could result in injury or damage to the appliance.



Please note:

This symbol identifies important advice or information for the user.

Troubleshooting and repairs

If the appliance requires repair, always contact the manufacturer's Customer Services.

Always insist on original spare parts.

Repairs carried out by unauthorised personnel may be dangerous and invalidate the guarantee.

Designated use

This is a household appliance only. Use only as described in these instructions.

As with all electrical equipment, whilst the instructions aim to cover as many eventualities as possible, caution and common sense should be used when operating and installing the appliance.

IMPORTANT SAFEGUARDS

Fundamental safety warnings



Attention!

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experi-

ence and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Danger! This is an electrical appliance, it is therefore important to respect the following safety warnings:

- If the power cable is damaged, it must be replaced by the manufacturer or the manufacturer's Customer Services in order to avoid all risk.
- Never touch the appliance with wet or damp hands.
- Never use the appliance with bare or wet feet.
- Never touch the plug with damp hands.
- Never immerse the appliance in water.
- Make sure the socket used is freely accessible at all times, enabling the appliance to be unplugged when necessary.
- Unplug directly from the plug only. Never pull the power cable as you could damage it.
- To disconnect the appliance completely you must unplug it from the mains socket.
- If the appliance is faulty, do not attempt to repair. Turn it off, unplug from the mains socket and contact Customer Services.
- If the power socket does not match the plug on the appliance, have the socket replaced with a suitable type by a qualified electrician.
- Never move the appliance by pulling on the power cable.
- The appliance must not be modified in any way, as any modifications may be extremely dangerous.
- Do not use an extension cable.
- The appliance must be installed in accordance with the rules on household appliances in force in the country concerned.



Important! Keep all packaging (plastic bags, polystyrene foam) away from children.




Important! Do not obstruct the air intake and outlet grills.

TECHNICAL CHARACTERISTICS

- De'Longhi purifiers incorporate the latest technological features for home air filtration;
- The air is taken in through the front panel;
- The contaminated air passes through a washable prefilter which removes large impurities such as coarse dust, hair, etc. The partially filtered air is then passed through a long-lasting EPA E12 filter with a large filtering surface, easily recognisable by the special pleated paper. This EPA E12 (High Efficiency Particulate Air) filter removes impurities down to a size of 0.3 microns, filtering all types of particle including tobacco, house dust and pollen;
- The air is then passed through a black active carbon filter which removes a variety of pollutants and unpleasant odours such as smoke, fine dust particles and formaldehyde. Some models have an active nano-silver filter against most pathogens (Staphylococcus aureus and Escherichia coli) yeasts and moulds. Moreover, the appliance is equipped with a filter with photocatalytic titanium dioxide with a UVC lamp, which can eliminate a variety of bacteria and toxic gases.
- The purified air is returned to the room through the top grille. The upward flow of air improves air circulation in the environment, without generating irritating cur-

rents.

- When active, the independently controlled ionizer releases a cloud of beneficial negative ions into the room together with the outflow of filtered air, allowing the removal of dust particles, pollen, cigarette smoke and car exhaust fumes.
- On contact with the negative ions, the particles of dust suspended in the air are negatively charged and can combine with the positively charged particles to form larger particles which will then be filtered by the purifier. The negative particles are attracted by positively charged surfaces, such as the floor or wall.
- Negative ions improve the ion balance in the atmosphere, as positive charges generally predominate. The ionizer therefore helps reduce the static electricity created by the presence of rugs, carpet, televisions and computer screens.

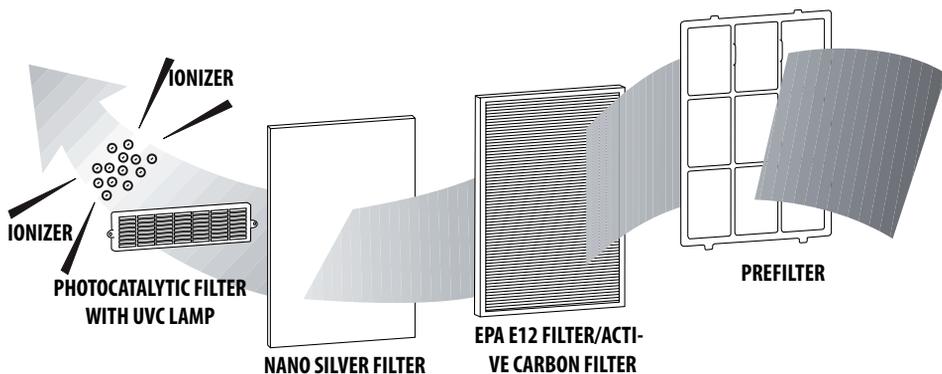

TECHNICAL DATA

Power supply	see rating plate
Absorbed power	"
Suitable for rooms of up to	80 m ² Mod. AC230 40 m ² Mod. AC150
number of fans	1
fan speed	3
ionizer button	YES

DISPOSAL



In compliance with European directive 2002/96/EC, the appliance must not be disposed of with household waste, but taken to an authorised waste separation and recycling centre.

DESCRIPTION

- A) Front panel
- B) Washable prefilter
- C) EPA E12 filter/active carbon filter
- D) Nano-silver filter (certain models only)
- E) Photocatalytic filter with UVC lamp
- F) Air quality sensor
- G) AQS (Air Quality System) Air quality LED indicator
- H) Handle
- I) Filtered air outlet grille
- L) Power cable with plug
- M) Cable compartment
- N) Control panel
 - O) ON/OFF
 - P) Fan speed
 - Q) AUTO speed
 - R) Ionizer
 - S) AQS (Air Quality System) air quality LED indicator on/off
 - T) Auto-off
 - U) Reset button
 - V) Fan speed LED display
 - W) LED timer (1-2-4-8 h)
 - X) EPA E12 filter exhausted LED
- Y) Safety microswitch

USE

Read these instructions before using the appliance.

- Unpack the air purifier and place on a stable flat surface so that the air intake in the front panel and air outlet (top grille) are not blocked. A good position in the room might be at least a metre from the wall.
- Remove the front panel (fig. 3). Inside the purifier you will find the prefilter (B) and EPA E12 filter/active carbon filter (C) and the nano-silver filter (D) (certain models only) packed, depending on the model, in a plastic bag. And the photocatalytic filter (E) fixed to the air intake grill.
- Remove the filter(s) (depending on the model) from the bag, as shown in fig. 2, then place them in the following order: nano filter, with the silver side adhering to the appliance, EPA E12 filter with the black active carbon side resting directly on and adhering to the nano-silver, then the prefilter, slotting it in place as shown in fig. 4.
- Replace the front panel;
- After making sure the voltage in your home corresponds

to the voltage indicated on the appliance, plug the appliance into the mains socket.

- Remove the protective film from the control panel.
- Turn the appliance on by touching the ON/OFF icon (O). The corresponding icon lights up and the appliance comes on automatically at minimum speed. The AUTO icon (Q) flashes and the air quality LED indicators (G) light up orange for 3 minutes.

This time is necessary for the appliance to detect air quality, then the AUTO icon becomes steady and the air quality LED indicators (G) change colour depending on the air quality detected and also the fan speed changes accordingly:

BAD AIR QUALITY:

orange + max. fan speed

SATISFACTORY AIR QUALITY:

green + med. fan speed

GOOD AIR QUALITY:

blue + min. fan speed

i Please note: the change in colour of the air quality indicator (G) is always sequential:

ORANGE <-----> GREEN <-----> BLUE

i Please note: to vary the set fan speed, touch the icon (P) corresponding to the required fan speed (Min/Med/Max).

- The LED corresponding to the selected speed lights up.

i Please note: When the appliance starts after having been turned off, using a light pressure on the ON/OFF, it starts with the last function set with the exception of the auto-off function).

“AUTO” operation (Q)

Tap the “AUTO” icon, the appliance independently decides the fan speed according to the air quality detected (min, med, max).

Ionizer (R)

For the release of negative ions into the environment through purified air, touch the ionizer icon (R). The corresponding LED lights up.

Auto-off (T)

This function can be used to turn the appliance off automatically after a given period of time. With the appliance on, touch the auto-off icon (T) to select how many hours should elapse before the appliance goes off (1-2-4-8 hours), the corresponding LED comes on.

AQS (S)

Tap the AQS icon (Air Quality System) to enable or disable the air quality LED indicators (G). This function is particularly useful if you want to completely eliminate the light source, during night operation for example.

i *Note: the AQS icon enables or disables the LED indicators only while the air quality detection system is always active.*

EPA E12 filter exhausted LED (X)

When the filter LED (X) flashes, the EPA E12 filter/active carbon filter must be replaced. Proceed as follows:

After unplugging the appliance from the mains socket, remove the front panel (A) and the prefilter (B), then remove the EPA E12 filter/active carbon filter (C) and replace with a new one obtainable from De'Longhi's authorised Customer Services. Replace the filters in the correct sequence as described above, then put the front panel back.

At this point, turn the appliance back on and reset as follows:

- insert a fine object into the hole in the reset button (U) and press until the flashing LED comes on steadily. Release the button. After about 5 seconds, the filter LED (X) goes off.

i *Please note: Before performing cleaning and maintenance, always unplug the appliance from the mains socket.*

i *Please note: Pressing the reset button (U) for less than 3 seconds activates/deactivates the icon tone.*

i *Please note: The appliance has a safety microswitch (Y) which turns the appliance off whenever the front panel (A) is removed.*

Cable compartment (M)

The appliance has a practical cable compartment (M), useful for storing the cable when the appliance is not in use.

CLEANING THE APPLIANCE

Clean the outside of the appliance with a soft slightly damp

cloth to remove dust, dirt or fingerprints. The front panel and prefilter can be removed and washed separately in hot soapy water (they are NOT dishwasher safe). Dry the components thoroughly before putting them back in the appliance. The top grille can be cleaned with a soft brush.

Do not clean the appliance by immersing in water.

MAINTENANCE AND FILTER REPLACEMENT

- Remember that the efficiency of your air purifier depends on the condition of the filters. They should therefore be checked regularly by removing the front panel.

Prefilter (B)

- Check the prefilter regularly. If large quantities of dust and other impurities have accumulated, remove and hand wash in hot soapy water. Dry thoroughly before replacing in the appliance.
- Frequent cleaning of the prefilter helps extend the life of the EPA E12 filter/active carbon filter.
- When the filter goes from white to dark grey or brown, it must be replaced.

EPA E12 filter/active carbon filter (C)

- The life of a EPA E12 filter/active carbon filter depends on the operating conditions of the appliance. In general, considering about 4 hours operation a day at medium speed with normal quantities of dust/smoke in the air, it should last about 6 months. However, when the EPA E12 filter exhausted LED (X) flashes, it must be replaced. (See the EPA E12 filter exhausted LED indicator paragraph). To replace the EPA E12 filter/active carbon filter, first remove the prefilter (B), then remove the EPA E12 filter/active carbon filter (C) and replace with a new one.
- Do not wash the EPA E12 filter/active carbon filter. When exhausted, it cannot be regenerated.
- Replacement De'Longhi filters can be obtained from the manufacturer's Customer Services and household appliance shops.

Nano-silver filter (D) (certain models only)

- The nano-silver filter (D) has a lifelong duration because it is protected by the EPA E12 filter. However, regular vacuuming is recommended.

Photocatalytic filter with UVC lamp (E)

- It is a permanent filter that requires no maintenance. **IT MUST NEVER BE REMOVED** as it acts as protection for the UVC lamp.