

## INTRODUCTION

Thank you for choosing a De'Longhi product.

Please take a few moments to read the instructions to avoid risks or damage to the appliance.

### Symbols used in these instructions

Important warnings are identified by the symbols below.

It is important to respect the warnings.

Failure to respect the warnings could lead to electric shock, serious injury, burns, fire or damage to the appliance.



#### **Danger!**

Failure to observe the warning may result in life threatening injury by electric shock.



#### **Important!**

Failure to observe the warning could result in injury or damage to the appliance.



#### **Danger of burns!!**

Failure to observe the warning could result in burns or scalds.



#### **Please note:**

This symbol indicates recommendations and important information for the user.

## IMPORTANT WARNINGS

The appliance is exclusively for the use of toasting bread products. Any other use is to be considered inappropriate and therefore dangerous. The manufacturer cannot be held responsible for eventual damage caused by inappropriate, improper or irresponsible use and/or for repairs made to the product by unauthorised personnel.



#### **Danger!**

- Before inserting the plug into the electrical outlet, make certain:
  - the voltage of the outlet corresponds to the value indicated on the information label, attached to the appliance.
  - the electrical outlet has sufficient grounding capacity: the manufacturer declines any responsibility for the lack of observation of this norm.
- In the case of incompatibility between the outlet and the plug of the appliance, have it replaced by a qualified technician. The use of adapters, multiple socket units and/or extension cords is not recommended. Whenever it may be necessary to use such equipment, it is advisable to use only simple or multiple adapters

or extension cords which comply with the current safety standards, and make sure not to exceed the voltage limit of the adapter or extension cord.

- When the appliance is plugged into the electrical outlet, and moreover, while it is turned on, never place hands into the bread toasting slots (A).
- Do not touch the appliance with wet or damp hands.
- Do not use the appliance with bare or wet feet.
- Do not leave the appliance on when not being used as this may be potentially dangerous.
- Do not unplug the appliance from the outlet by pulling on the cord.



#### **Important!**

- This is an household appliance only. It is not intended to be used in: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- The plastic bag in which the appliance was packaged should be kept out of reach of children as it poses a suffocation hazard.
- This appliance can be used by children aged 8 upwards and by persons with reduced physical, sensory or mental capabilities or who lack of experience and knowledge if they are supervised and have been given instructions concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance must not be carried out by children unless they are older than 8 and supervised. Keep the appliance and its cord out of the reach of children under 8 years of age.
- Unplug the appliance from the electrical outlet when it is not in use.
- Do not leave the appliance exposed to the elements, (rain, direct sunlight, frost, etc.).
- Before doing any cleaning or operation, unplug the appliance from the electrical outlet. Do not immerse

the appliance, the plug, or the electrical cord in water.

- In case of break down or improper functioning of the appliance, turn off the appliance without tampering with it.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent in order to avoid a hazard.

- The appliance is not intended to be operated by means of an external timer or separate remote-control system.



### **Danger of burns!!**

- The metal sides of the toaster and the areas surrounding the bread slots (A) become very hot during use: control the appliance touching only the plastic dials and handles.
- Bread is a foodstuff which may catch fire.

Do not use this appliance under or next to curtains or other combustible material.

- Do not cover the appliance while it is in use.



### **Please note:**

- After having removed the appliance from the packaging, make sure that the product is complete and in perfect condition.
- In order to remove the dust that may have accumulated on the appliance, simply dust it off with a soft cloth.



- This appliance complies with directive 2004/108/CE on electromagnetic compatibility.
- Materials and accessories coming into contact with food conform to EC regulation 1935/2004.

## **DESCRIPTION (pag. 3)**

- A) Bread toasting slots
- B) ON lever
- C) Toasting level indicator

- D) Toasting level knob
- E) Crumb tray
- F) "Defrost" button and light
- G) "Reheat" button and light
- H) "Bagel" button and light (toasting on one side)
- I) Stop/cancel button
- L) Removable "Warming Rack"

## **USING THE CONTROLS**

- Make sure the lever (B) is raised and the knob (D) is set for medium level toasting.
- Plug into the mains.
- The first time you use the toaster, to eliminate the "new" smell operate the appliance without bread for at least 5 minutes. Ventilate the room.
- Place the slices of bread in the toasting slots (A), then lower the lever (B) as far as it will go.



**Please note:** if the appliance is not plugged into the mains, the lever (B) will not stay down.

- When toasting is complete, the lever rises slowly up, together with the slices of bread.
- If the bread is not sufficiently toasted, select a darker toasting level by turning the knob (D). Alternatively, if the toast is too dark, select a lighter toasting level.
- Toasting can be interrupted at any moment simply by pressing the stop/cancel button (I).



**Danger of burns!!** the bread toasting slots become very hot during operation.

Do not touch!

### **"Defrost" function**

You can toast frozen slices of bread by pressing the "defrost" button (F) immediately after lowering the lever (B). The toasting cycle will be prolonged in order to achieve the desired toasting level.

The light stays on while the defrost function is in use.

### **"Reheat" function**

Lower the ON lever (B) and press the "reheat" button (G). The reheat light stays on while the reheat function is in use. The reheat time is fixed and cannot be adjusted by means of the toasting level knob.

### **"Bagel" function (toasting on one side)**

The "bagel" function toasts the bread, bagels or muffins on one side only (the inside), while the other side (the outside)

remains warm.

Slice bagels and muffins in half before toasting. Lower the ON lever (B) and press the "bagel" button (H).

The bagel light stays on while the function is in use.

### Using the stop/cancel button

To stop toasting, press the stop/cancel button (I) at any moment.



**Important!** do not force the ON lever (B). Always use the stop/cancel button (I).

### Crumb tray

The crumb tray (E) must be emptied regularly as accumulated crumbs could represent a fire risk. After toasting, allow the toaster to cool, then extract the crumb tray (E) and empty.

### "WARMING RACK" device (L)

Use this device to heat croissants.

- Fasten the removable "warming rack" to the appliance as shown in the Figure on page 3.
- Rest the croissant on the grill.
- Turn the browning control dial (D) to the desired position.
- Press down the control lever (B) until it clicks into place.
- If the croissant is not warm enough, next time select a darker level of toasting.

### SUGGESTIONS

- Do not use the toaster empty (without slices of bread).
- Do not use very thin or broken slices of bread.
- Do not insert foods which could drip during cooking. Apart from making cooking difficult, they could cause fire.  
Before using the toaster, always remove any drips from the crumb tray.
- Never use force to insert excessively large pieces of food. Never insert forks or other utensils into the toaster to remove the bread. This could damage the heating elements.  
If food remains stuck in the toaster, unplug from the mains, turn the appliance upside down and shake lightly.

### CLEANING - MAINTENANCE

- Before cleaning the toaster or carrying out maintenance, always unplug from the mains.
- Wait for the appliance to cool down before cleaning.
- The outside of the toaster must be cleaned with a damp

cloth. Never use abrasive cleaning products as they could damage the surface.

- NEVER IMMERSE THE APPLIANCE IN WATER.
- When you have finished using the toaster, always unplug from the mains and empty the crumb tray on the bottom of the appliance.
- If slices of toast remain stuck in the appliance, unplug, turn upside down and shake lightly.
- NEVER TOUCH ANY PART OF THE TOASTER, ESPECIALLY THE INSIDE OF THE BREAD TOASTING SLOTS, WITH SHARP UTENSILS.

### TECHNICAL CHARACTERISTICS

---

Power supply	See rating plate
Absorbed power	"