### DESCRIPTION

- A Mode selector
- **B** Thermostat
- C Indicator light
- **D** Tip over switch
- **E** Filter protection grille
- F Filter

### USE

### Installation

The appliance can be used on any horizontal surface.

Do not overload the electrical circuit. Avoid using the same socket for other appliances.

### **Electrical connection**

Before plugging into the mains, make sure the voltage of your mains supply corresponds to the value V indicated on the appliance and that the socket and power line are appropriate for the load required.

# Operation and use

- Make sure the selector (A) is in the "0" position before plugging the appliance into the mains socket.
- 2. Plug into the mains socket.
- 3. Turn the appliance on by placing the thermostat (**B**) in the Max position and the mode selector (**A**) in one of the following positions: ★ /1/2/3.

## The following modes are available:

- Summer mode (fan only): turn the mode selector to the sposition (the light comes on).
- Low power operation: turn the mode selector to position "1".
- Medium power operation: turn the mode selector to position "2".
- High power operation: turn the mode selector to position "3"
- To turn the appliance off: turn the mode selector to the "0" position and the thermostat to the ★ position, then unplug from the mains.

### Adjusting the thermostat

When the room has reached the required temperature, turn the thermostat (**B**) slowly anticlockwise until you hear a "click". The thermostat will then keep room temperature at the selected level automatically.

## Frost prevention mode

With the thermostat dial at minimum \* and the mode se-

lector (A) on "3", the appliance maintains room temperature at about 5°C, preventing freezing with minimal energy consumption.

### MAINTENANCE

- Always unplug from the mains socket before cleaning.
- During the season when the appliance is in use, clean the air intake and outlet grilles regularly using a vacuum cleaner.
- To clean the filter, remove the rear grille (**E**) by pulling it outwards. Remove the dust filter (**F**) which retains impurities in the air drawn in from the room, blow on it lightly then replace in the appliance.
- Never use abrasive powders or solvents to clean the appliance.

## **TECHNICAL CHARACTERISTICS**

Supply voltage Absorbed power

See rating plate