

# DINAMICA

with **LatteCrema** SYSTEM 



## QUICK START GUIDE

**DeLonghi**

VISIT US AT [DELONGHI.COM](http://DELONGHI.COM)



ECAM35075SI

## EASILY REGISTER YOUR MACHINE & GET MORE OUT OF YOUR ESPRESSO EXPERIENCE

Register your Fully Automatic Espresso Machine and become De'Longhi Club Member. Join the De'Longhi Club to get more out of your coffee experience.



**+1  
WARRANTY**  
RECEIVE 1  
ADDITIONAL YEAR  
OF WARRANTY  
FOR REGISTERING  
PRODUCT



**20%  
OFF**  
MEMBERSHIP  
DISCOUNT ON  
ACCESSORIES



PRIVATE  
ONLINE SALES



DELONGHI  
SPECIALIST  
SUPPORT



EASY  
ORDERING




EXCLUSIVE  
COFFEE EVENTS  
& NEWS

De'Longhi Club Member discount: Only members of the Club will receive special offers on coffee accessories.

### STEP #1: TAKE A PHOTO

- Snap a photo of the camera icon, including the points.

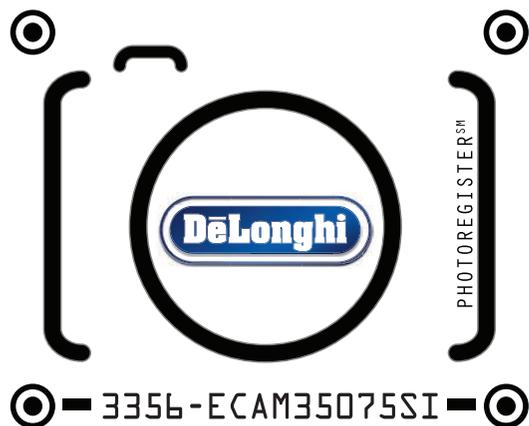

### STEP #2: SEND PHOTO

- Send a photo via text, Facebook Messenger or upload online.



TEXT PHOTO  
TO 71403



MESSANGER @  
PHOTOREGISTER



ONLINE:  
WWW.DELONGHI.PHOTO


### NEED HELP?:

Visit [photoregister.com/help](http://photoregister.com/help)  
or text HELP to 71403.

### CONTACT US

- Call 1-800-945-0929
- Online: [Delonghi.com](http://Delonghi.com)

## IN THE BOX

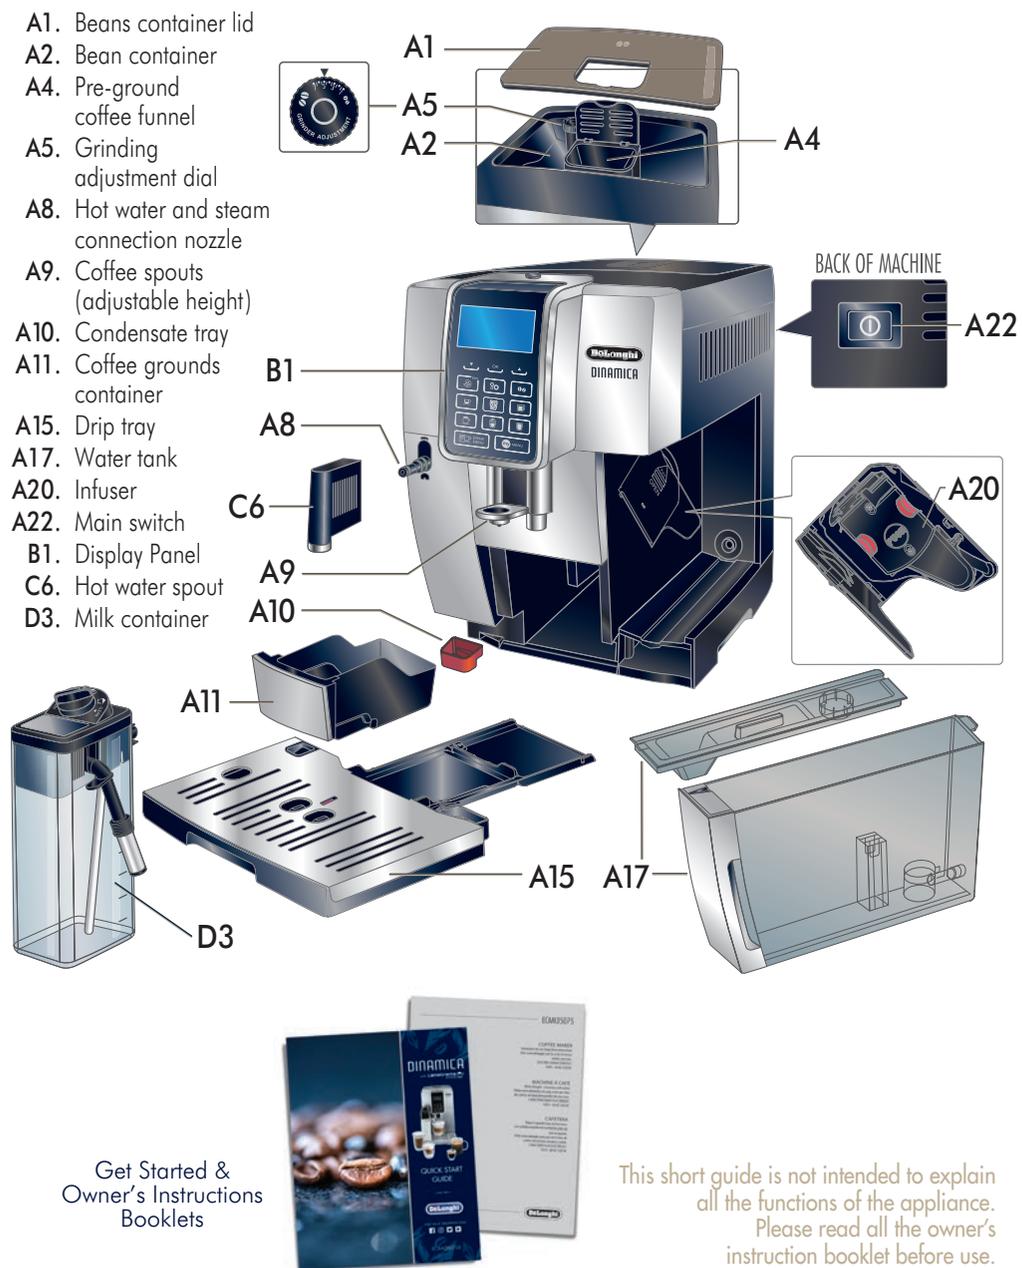

Get Started &  
Owner's Instructions  
Booklets




This short guide is not intended to explain all the functions of the appliance. Please read all the owner's instruction booklet before use.

## GET READY


Remove all stickers and clean all accessories with warm water and mild detergent and dry them. Prepare the machine to be rinsed and follow instructions on the display. This is only required the first time out of the box.

**6** The machine will deliver hot water and will shut off automatically once rinsing is complete.

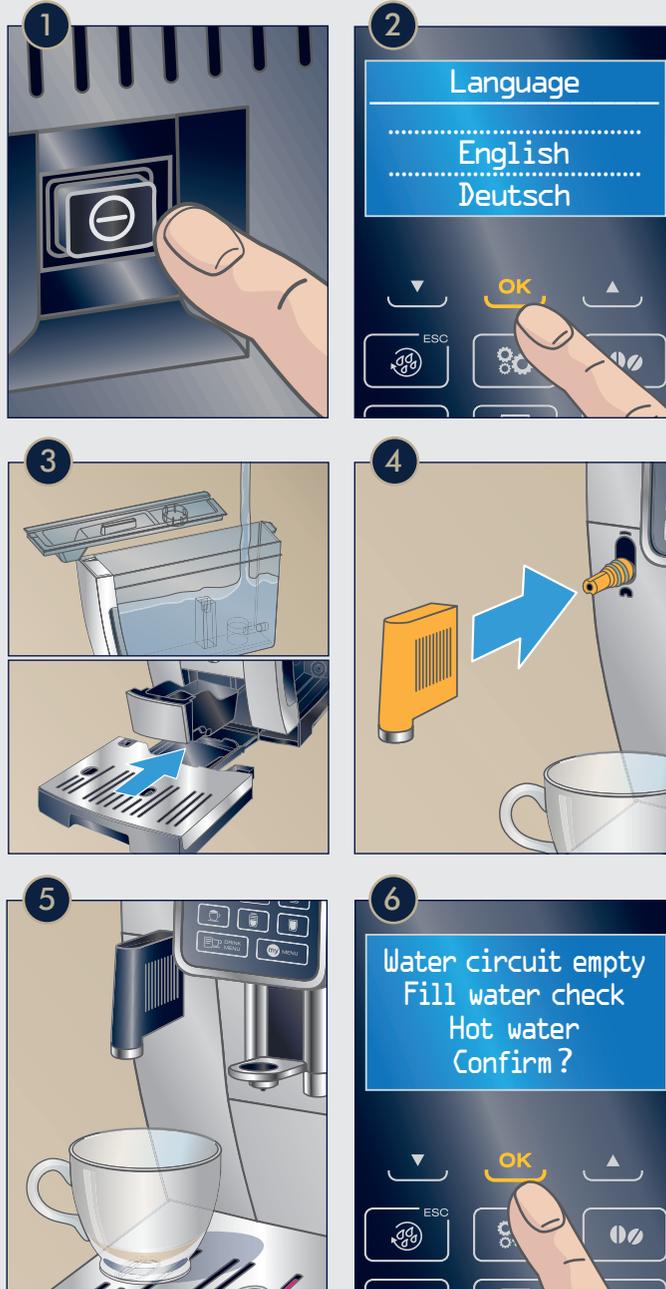

## FIRST USE CYCLE

The machine is ready to be used. To finalize the set up and ensure best results, brew and dump the 4 or 5 espressos.

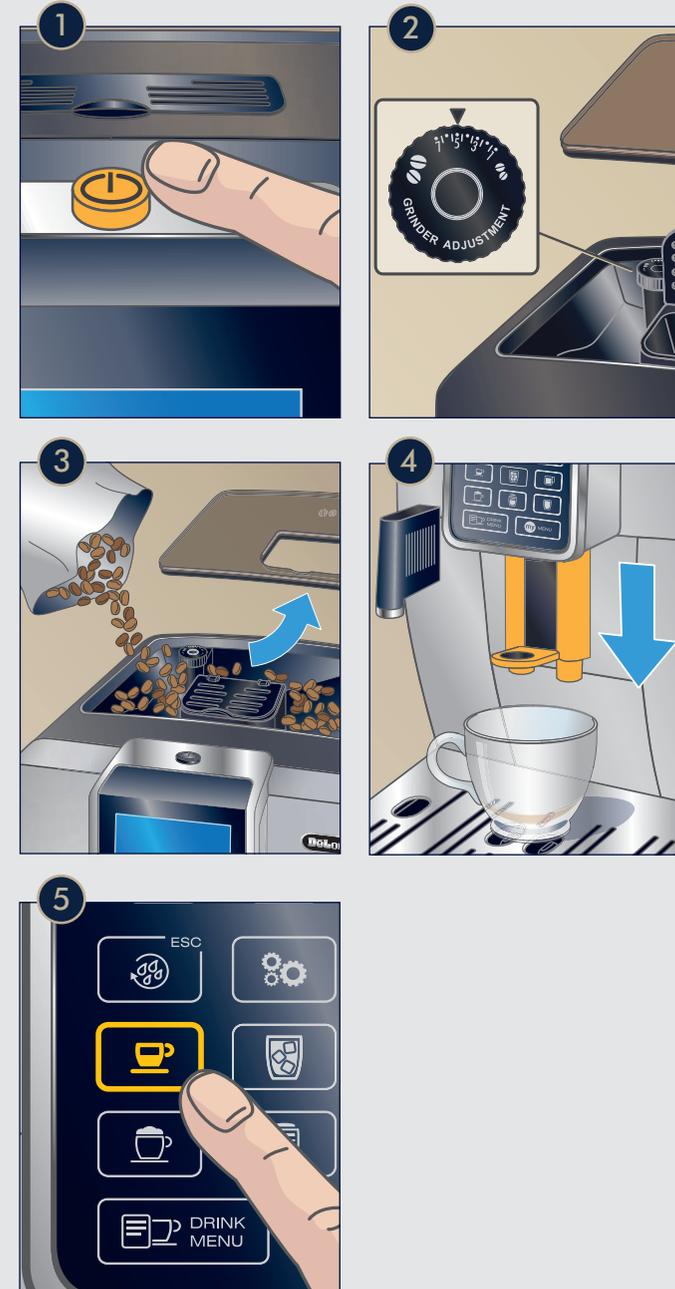

## BREW ESPRESSO

Simply select one of the pre-set beverages from the display or from the **Drink Menu**. The preparation will start immediately.

**2 Optional** - If you want to customize strength of your pre-set beverage, select it by pressing the Strength button until desired level before selecting the recipe.

**3** Select One Touch recipe and preparation will start.


**4 OR...** Select recipe from Drink Menu.

**5** You can use pre-ground coffee by selecting the pre-ground option pressing the strength button six times.


**6** Use the specific funnel to add pre-ground coffee and select recipe.

### One Touch recipes:

-  Espresso
-  TrueBrew Over Ice™ Coffee
-  Long

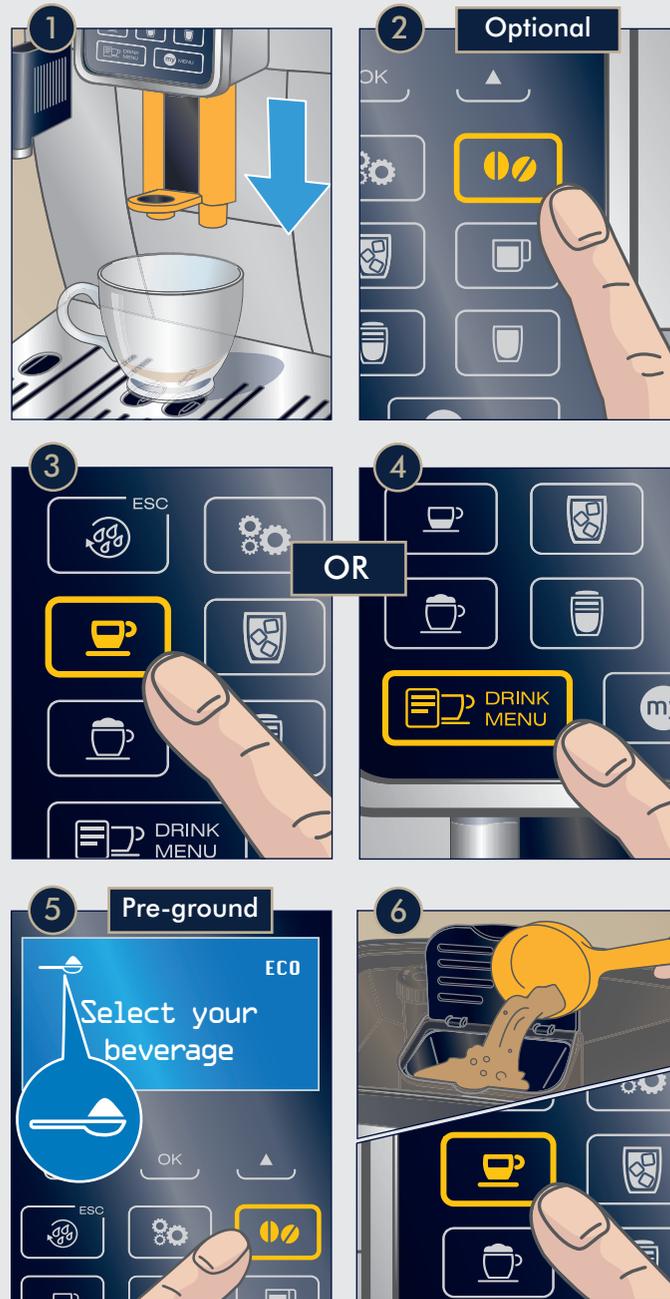

## MILK RECIPIES

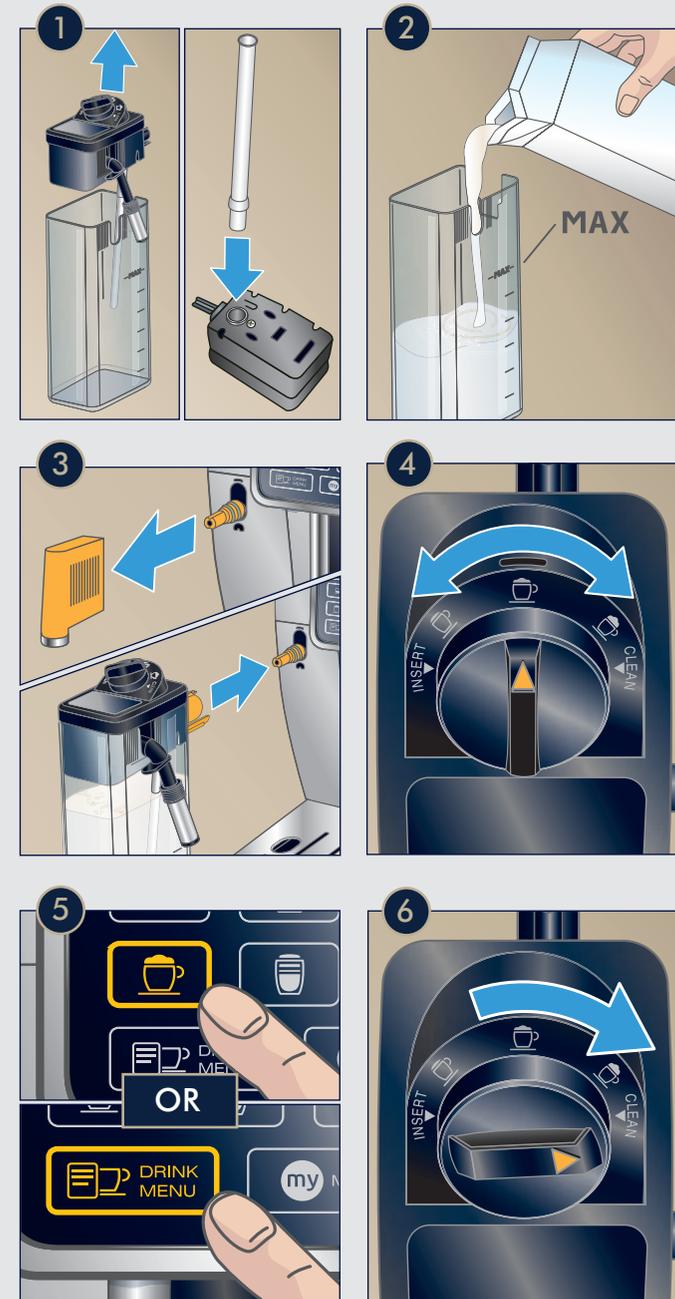

To make a Milk recipe, use the provided milk container. Use cold cow milk or your preferred milk alternative. Whole milk or oat milk will give the best results.

**1** Open the lid and make sure the milk intake tube is correctly inserted in the bottom of the milk container lid.

**4** Use the selector to choose between flatter or dryer foam.

**5** Select One Touch Milk recipe **OR** select recipe from Drink Menu.

**6** Twist the selector to "clean position" after beverage is ready to start cleaning cycle.

### One Touch Milk recipes:

-  Cappuccino
-  Latte
-  Hot Milk

## EXTRACTION GUIDELINES

Depending on your choice of beans, you might need to adjust the grinder setting to a finer or more coarse choice.



- Flow like warm honey
- Nut-brown Crema
- Well balanced and lingering taste

- Flowing fast like water
- Light and pale Crema

### To make it perfect:

- Adjust grinding setting to a finer setting
- Select a higher strength




- Flowing in drips or not at all
- Crema very dark and not uniform

### To make it perfect:

- Adjust grinding setting to a coarser setting
- Select a lower strength



## CLEANING

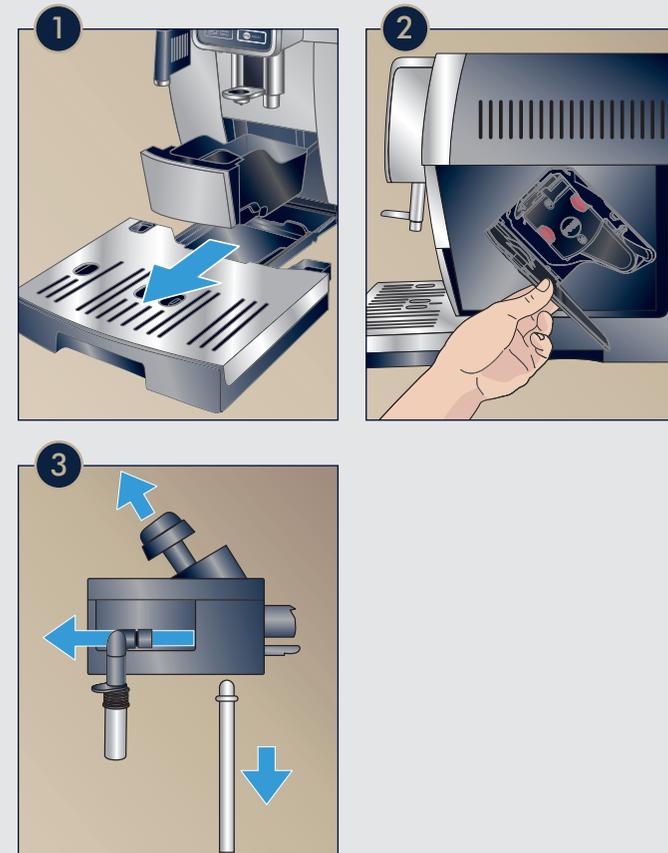

Keeping your machine clean will improve quality of the beverage and life span of the machine.

- 1 Empty drip tray daily and empty coffee ground container when lights come up.

- 2 Once a month, clean the inside of the machine. Follow User Manual detailed instruction section 14.9.

- 3 Remove and clean each part of the milk container lid. Follow User Manual section 14.10.

## DESCALING




- 4 Promptly descale when indication light comes on. Follow user Manual section 15.

## INSERT WATER FILTER


To ensure better quality of the water install the provided water filter. Under normal use, filters last about 3 months. If coffee maker is left unused, the filter will last a maximum of 3 weeks.

\*The type of filter may vary.

6 Once the filter is installed, activate it on machine Settings → Maintenance → Install Filter. See section 17 of User Manual for detailed instructions.

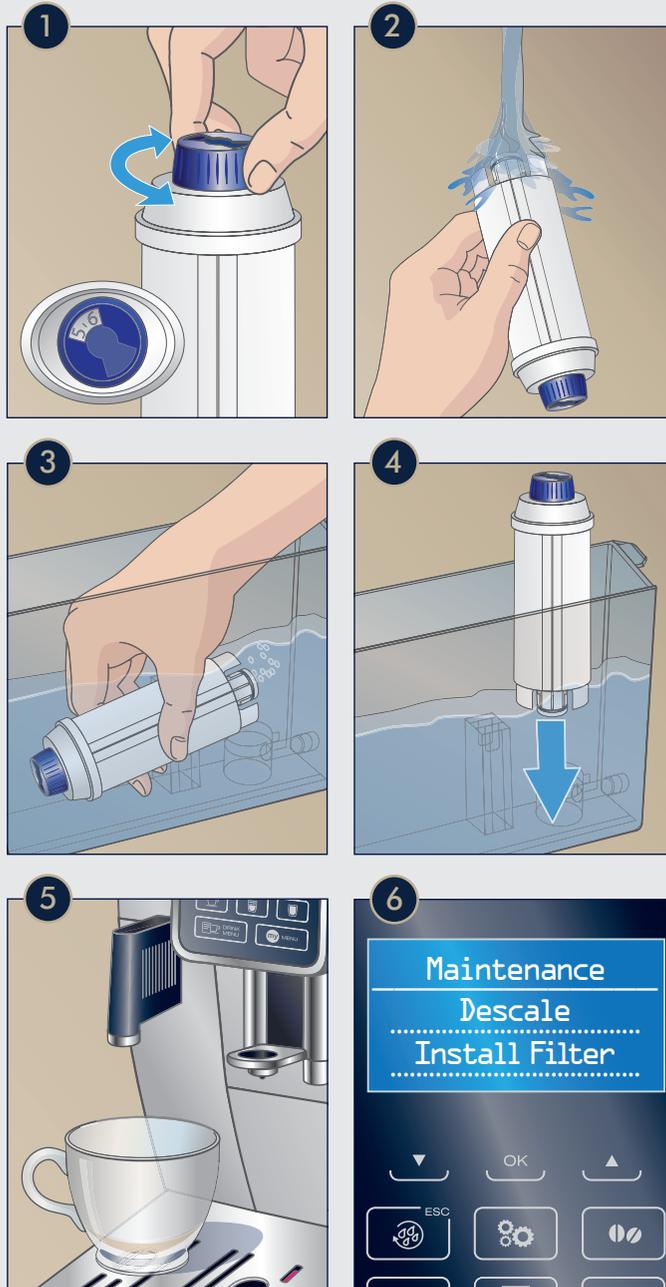

## SET WATER HARDNESS

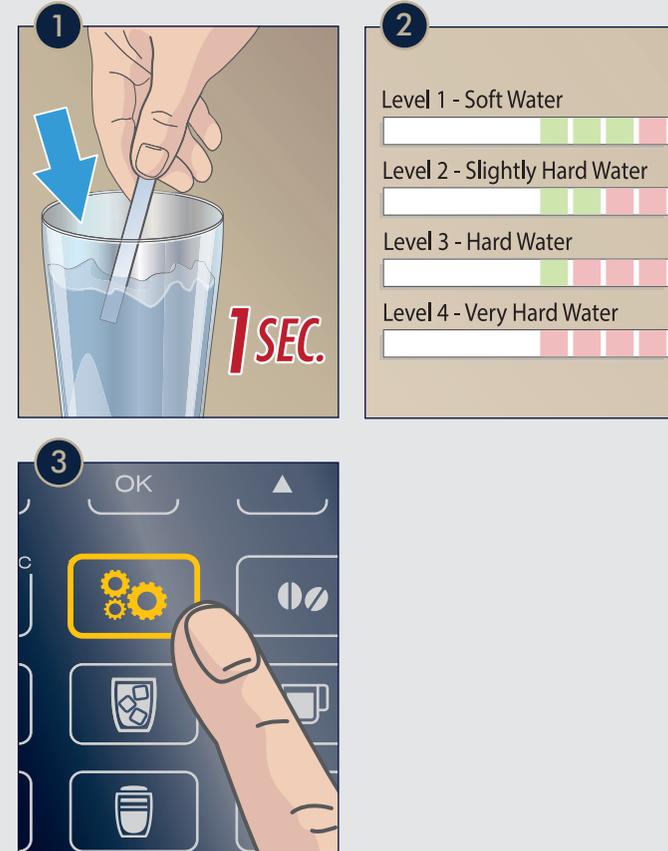

Analyze the hardness of your water to set your machine accordingly.

1 Dip the provided Total Hardness Indicator in a glass of water for one second and shake it.

2 Wait a couple of minutes. Read the Indicator paper colors and compare with this table.

3 Set water hardness on the machine from Setting Menu → General → Water Hardness. See User manual at section 16.2 for further details.



## — ACCESSORIES —

Enjoy our full line of drinkware:  
an exclusive line of Espresso, Cappuccino and Latte glasses.



### Coffee Care & Maintenance

Experience the De'Longhi Care Kit Line to improve  
the performance of your fully automatic machine.



Descaler



Descaler mini



Water Filter



Coffee Care Kit



Multi-Clean

... to learn more about the De'Longhi accessories visit: [delonghi.com](http://delonghi.com)